marbletrend flinders

GLASS SHOWER PANEL
INSTALLATION INSTRUCTIONS

DIMENSIONS	CODE
2000(H) x 865-890mm	SSSP26CHCLP
2000(H) x 1165-1190mm	SSSP34CHCLP
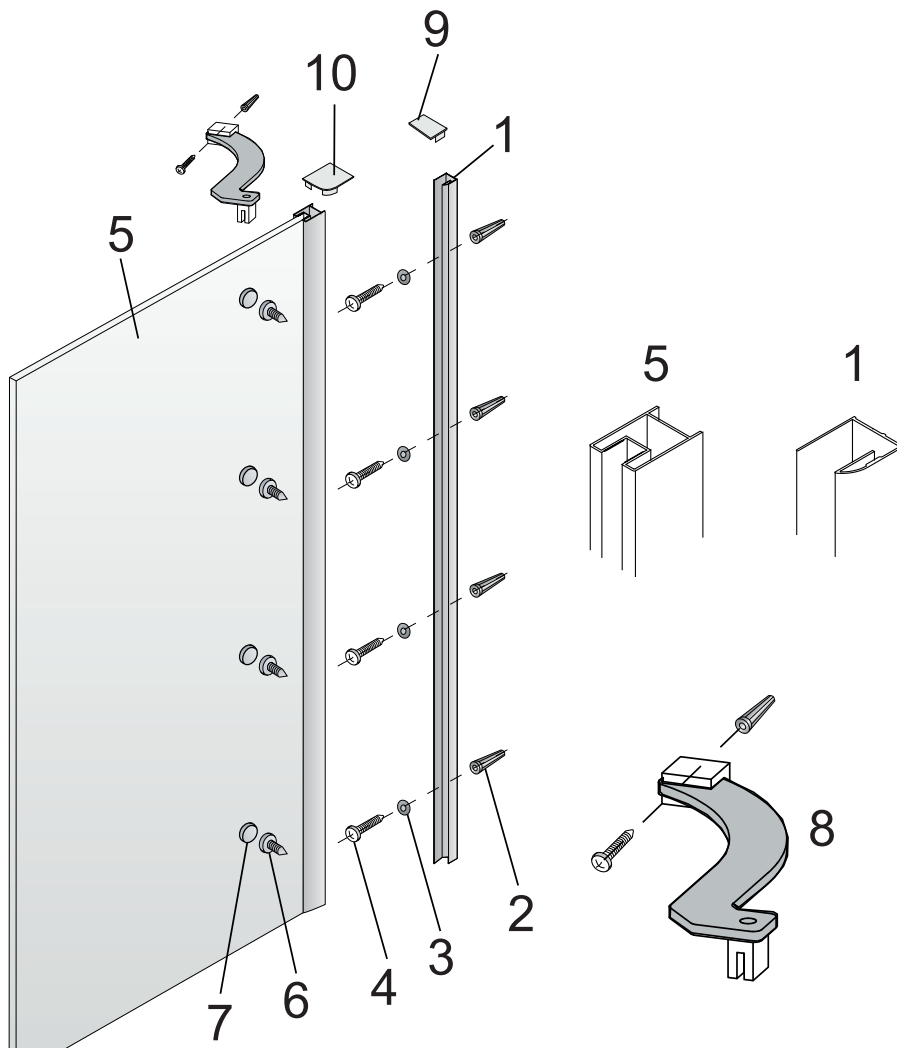
COMPONENTS

1. Wall jamb
2. 4 x 6mm anchors
3. 4mm SS washer
4. 4 x 3.5x35mm SS screws
5. Fixed panel
6. 4 x 3.9x8mm SS screws
7. 4 x screw caps
8. Support arm assembly
9. Wall jamb cap
10. 2 x cover caps for fixed panel(L/R)

INSTALLATION STEPS

STEP 1
i. Place jamb fitting (1) on wall ensuring it is plumb and level. Mark screw hole positions.
ii. Drill 6mm holes x 35mm deep. Insert 6mm anchors (2).
iii. Fix jamb to wall with 3.5x35mm SS screws (3) and 4mm SS washers (4).

STEP 2
i. Insert fixed panel (5) into wall jamb (1)
ii. Drill 4 x 3.2mm holes and fix panel (5) to jamb using 3.9x8mm SS screws. Affix plastic screw caps (7) over screw heads.

STEP 3
i. Place support arm (8) in position on top of the fixed panel and mark the screw hole positions. Drill 6mm holes x 35mm deep. Insert 6mm anchors (2).
ii. Fix support arm using 3.5x35mm SS screw (3) and 4mm SS washer (4).
iii. Tighten grub screw to fixed panel ensuring it is level and plumb.

STEP 4
i. Place wall jamb cap (8) on jamb and placecover cap (10) on fixed panel.

STEP 5
i. Apply silicone sealant around external joints only of wall jamb and fixed panel.
ii. Allow 24 hours for sealant to cure.